




# Nikon Coolpix L32 Selection buttons Replacement

If your Nikon Coolpix L32 selection buttons on the camera are not working, you should consider replacing them.

Written By: Sherika Jacobs

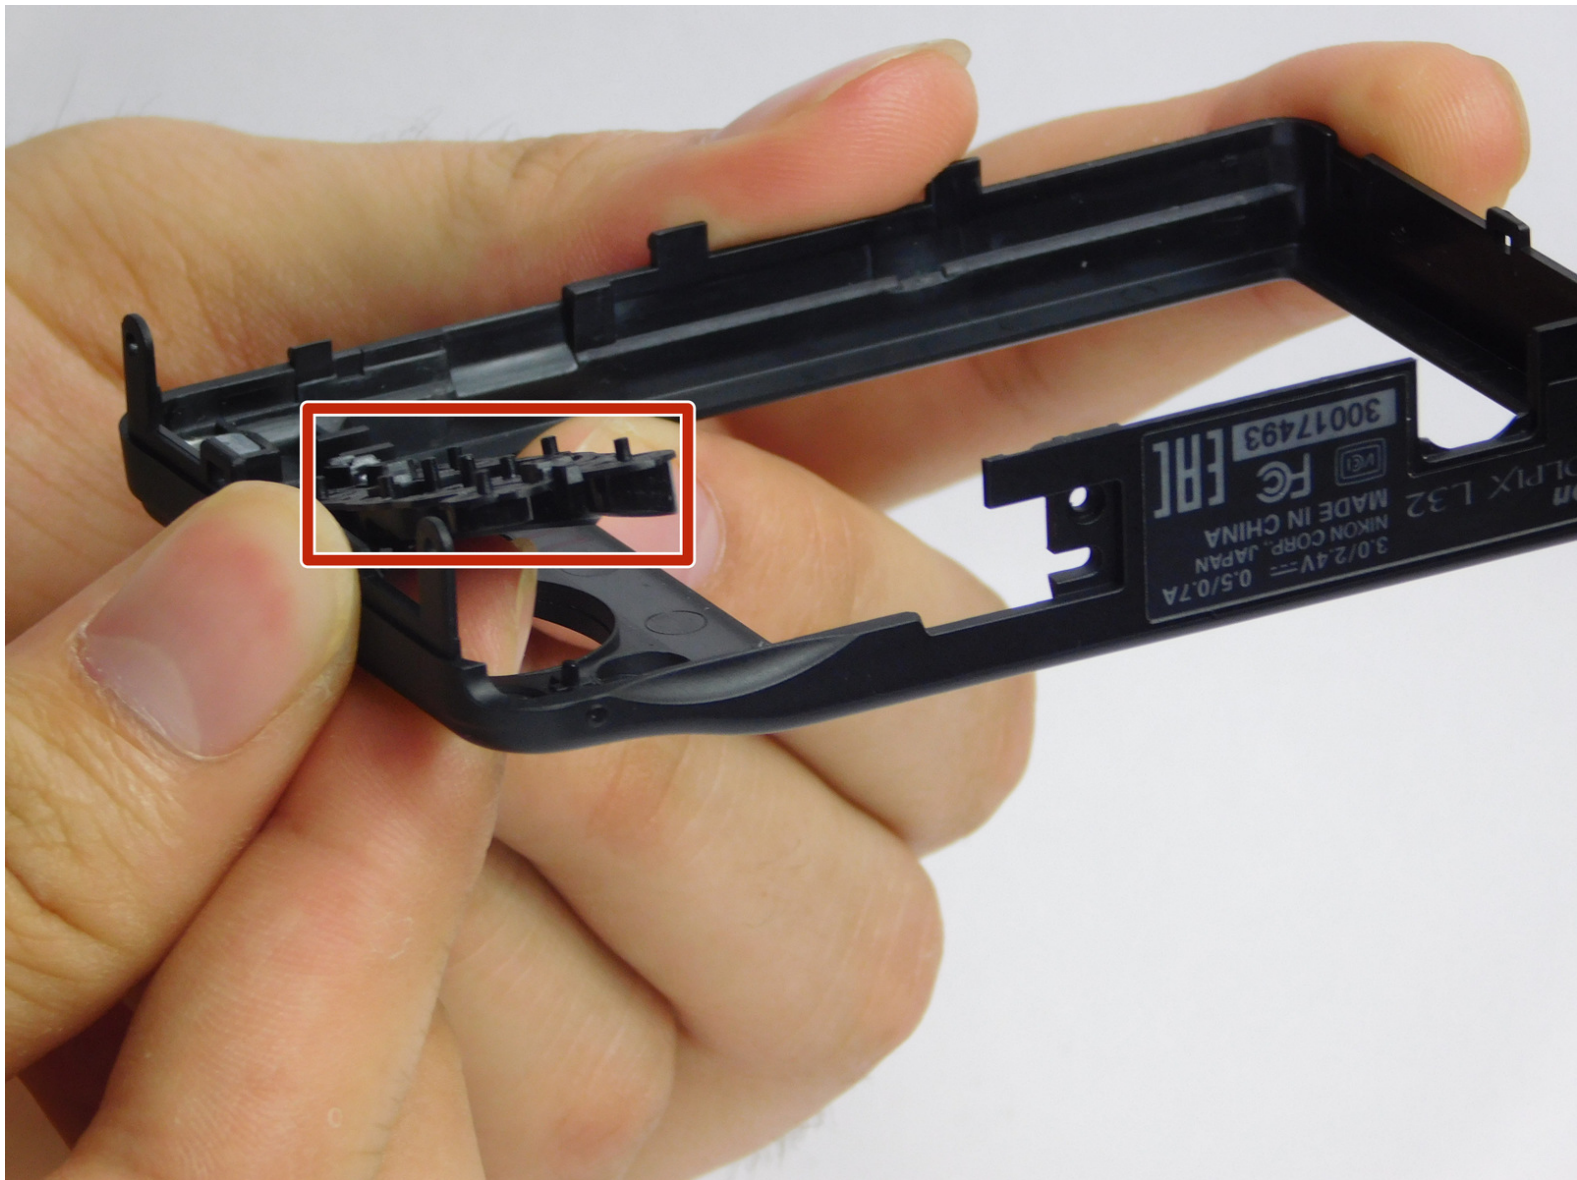

## INTRODUCTION

This guide will explain how to replace the selection buttons on the camera. There are no hazards associated with this replacement. Let's get started!

---



### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Front Panel




- Remove the six(3.93mm screws) on the outside of the camera using a Phillips 00 screwdriver.

## Step 2

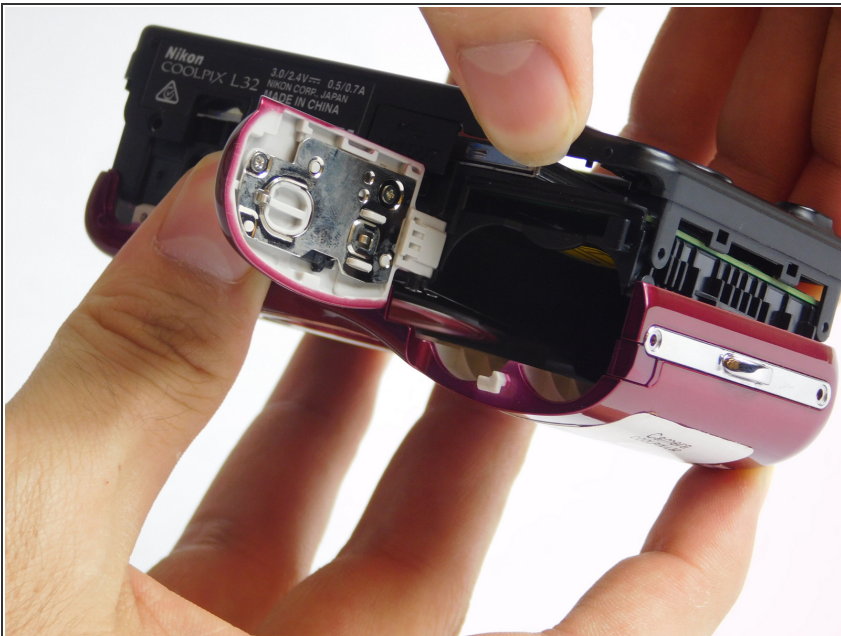

- Open the battery compartment door and pull the black back face apart from the front red face.

## Step 3 — Selection buttons

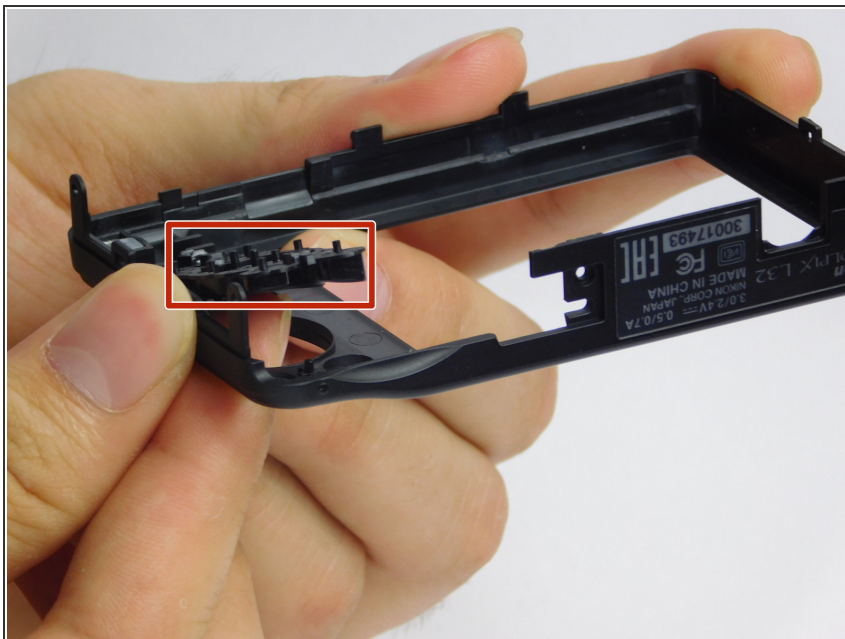

- Secure the black back case in hand and remove selection buttons from the case by pushing them upward and replace them with a new set of buttons.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-07 06:58:30 AM.